







East Wall

Switch

1:00??/?

Range 1

1:00??/?

Disruptor??  
for 1:001/1?

B10/0

Range 2

### Modification 2

To eliminate the need for the operator to manually stop the pump before the tank completely fills, a N.C. Float Switch (FS<sub>1</sub>) is inserted into the tank and into Rung 1.



